






## Tube to Flare

<p>Sync-Lok to <i>AN</i> Union</p>  <p>21</p>	<p>Sync-Lok to <i>AN</i> Bulkhead Union</p>  <p>21</p>	<p>Sync-Lok to <i>AN</i> Adapter</p>  <p>21</p>
------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------





## Tube to O-Ring Seal

<p>O-Ring Seal Male Connector</p>  <p>17</p>	<p>Male Connector to Straight Thread Boss</p>  <p>19</p>	<p>O-Ring Seal Straight Thread Connector</p>  <p>19</p>
-----------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------

## Cap & Plug

<p>Cap</p>  <p>18</p>	<p>Plug</p>  <p>18</p>
----------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------

## Components

<p>Front Ferrule</p>  <p>20</p>
<p>Back/Rear Ferrule</p>  <p>20</p>
<p>Single Ferrule</p>  <p>20</p>
<p>Nut</p>  <p>18</p>